

MONTERINGSANVISNING

Inbörat räcke i vang





ASSEMBLY INSTRUCTIONS

Balusters fixed in string

MONTAGEANLEITUNG

Geländer eingebohrt in Wange

ALT. 1

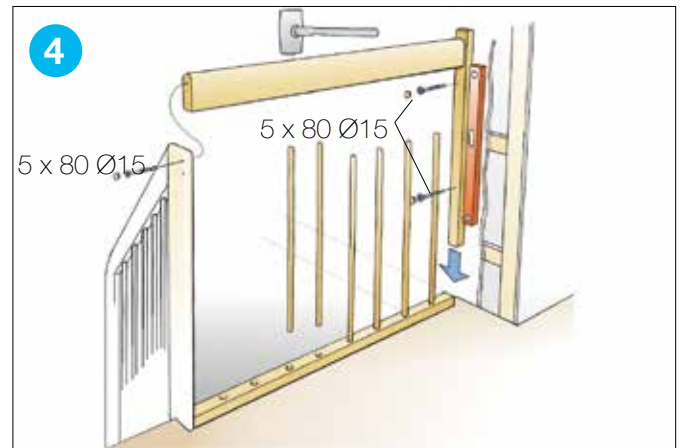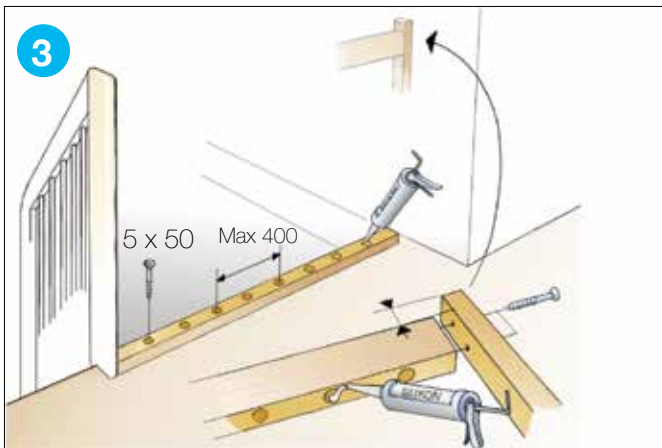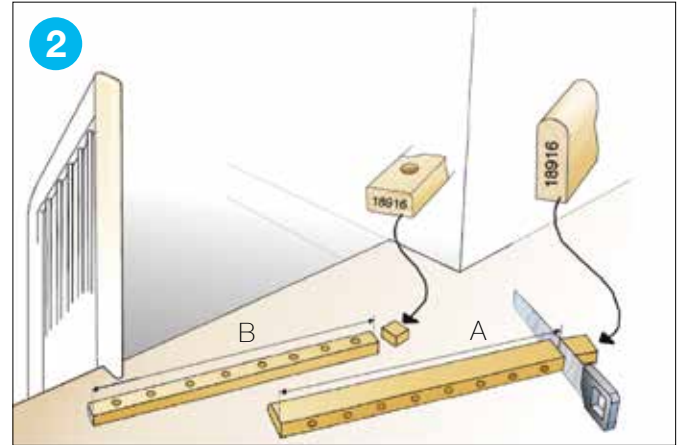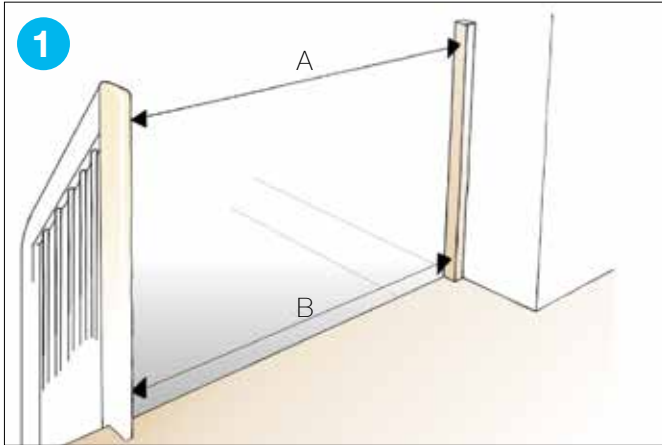

ALT. 2

